
 
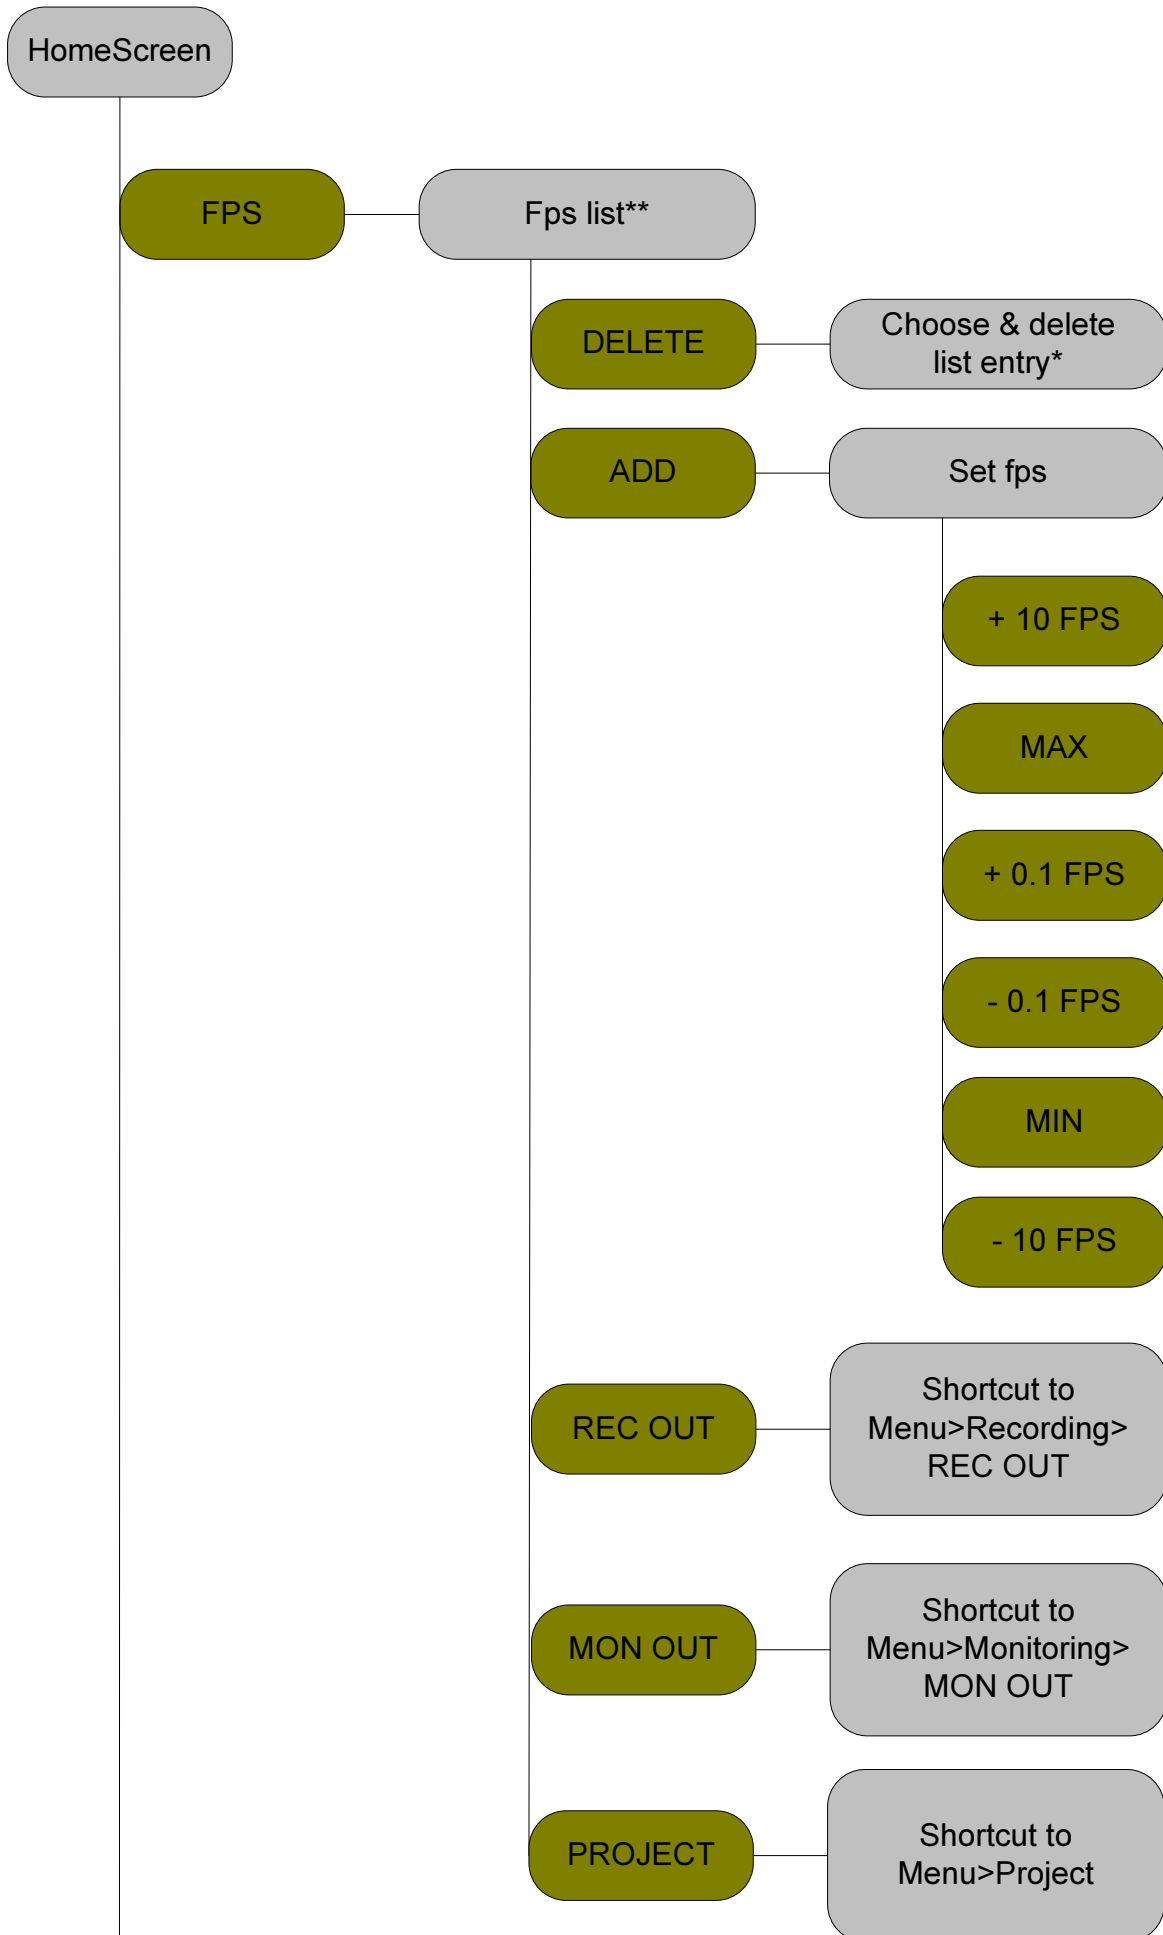



UI Tree for ARRI ALEXA SUP 2.0

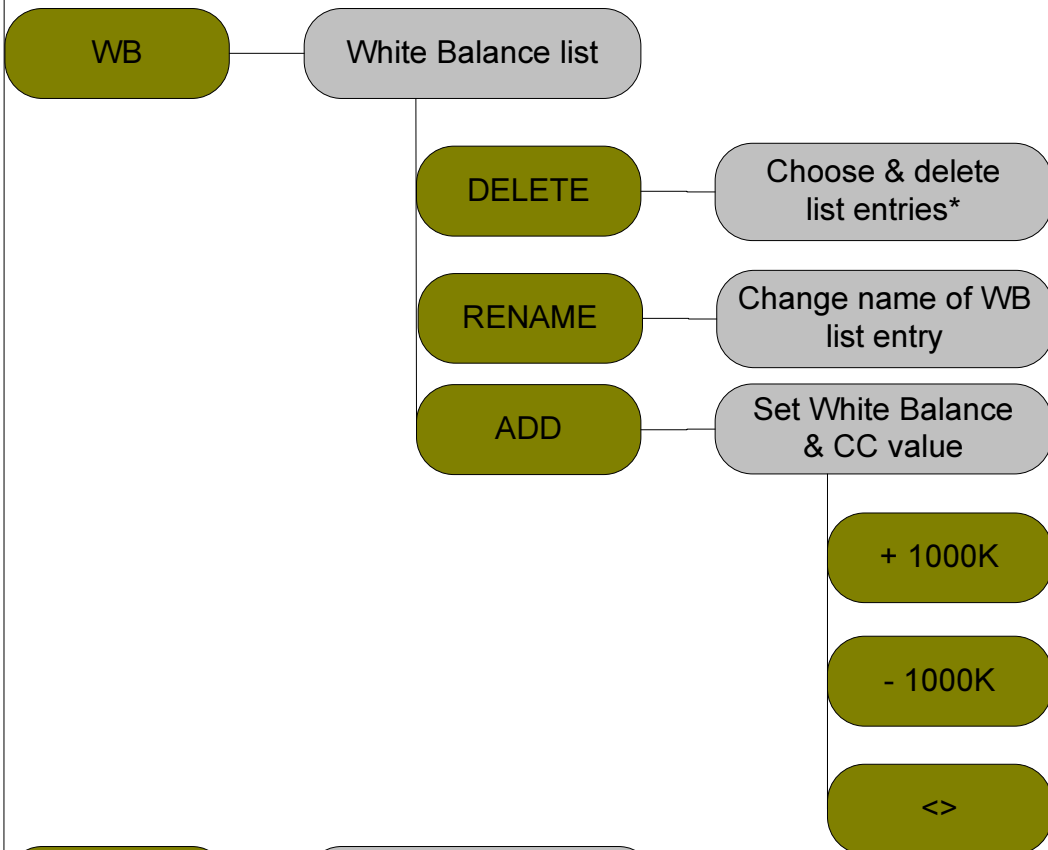

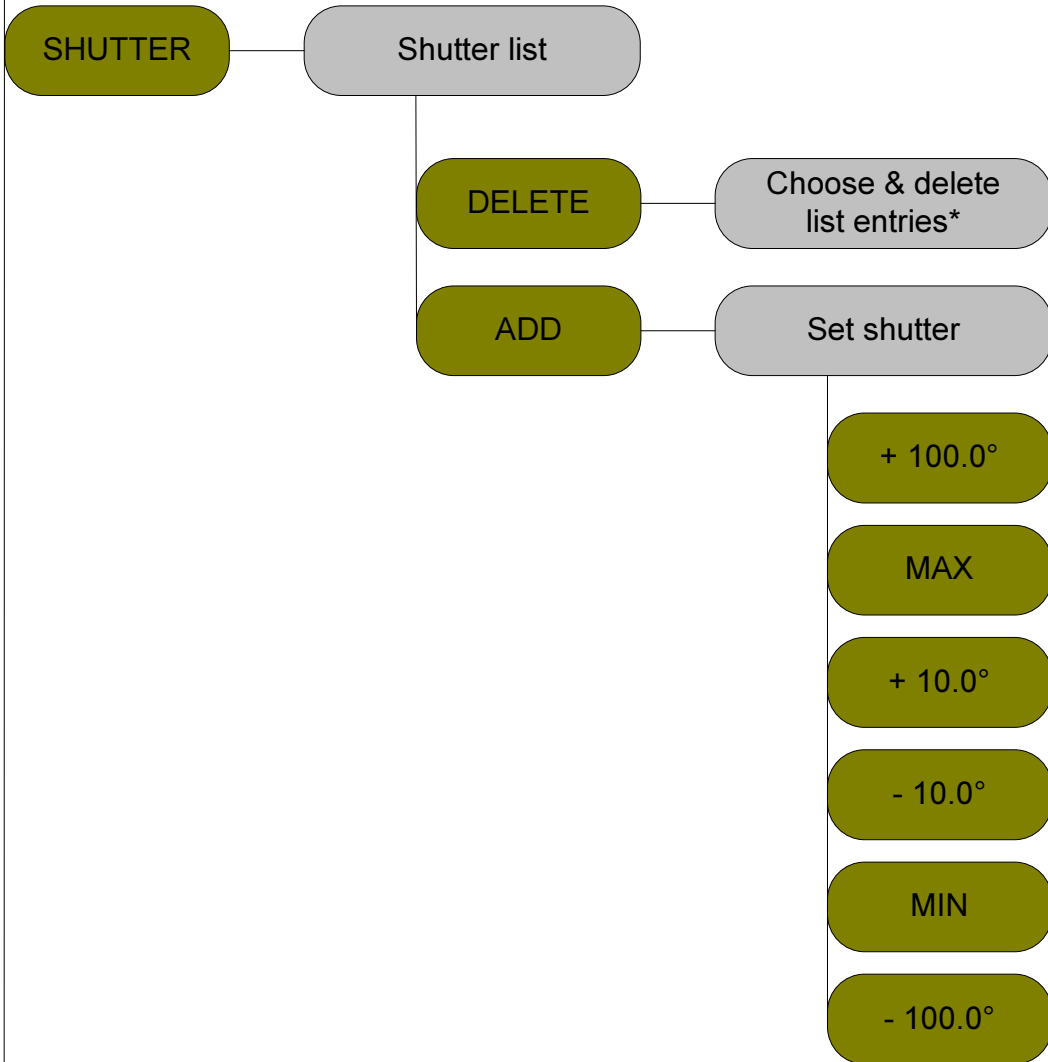

MENU

See own chart

INFO

STATUS

SAVE TO SD

Saves log to SD card

VERSION

Opens Version Info screen

SxS CARDS

Opens SxS CARDS Info screen

SYSTEM

Opens System Info screen

VERSION

STATUS

Opens Status Info screen

SxS CARDS

Opens SxS CARDS Info screen

SYSTEM

Opens System Info screen

SxS CARDS

STATUS


Opens Status Info screen


VERSION

Opens Version Info screen

SYSTEM

Opens System Info screen

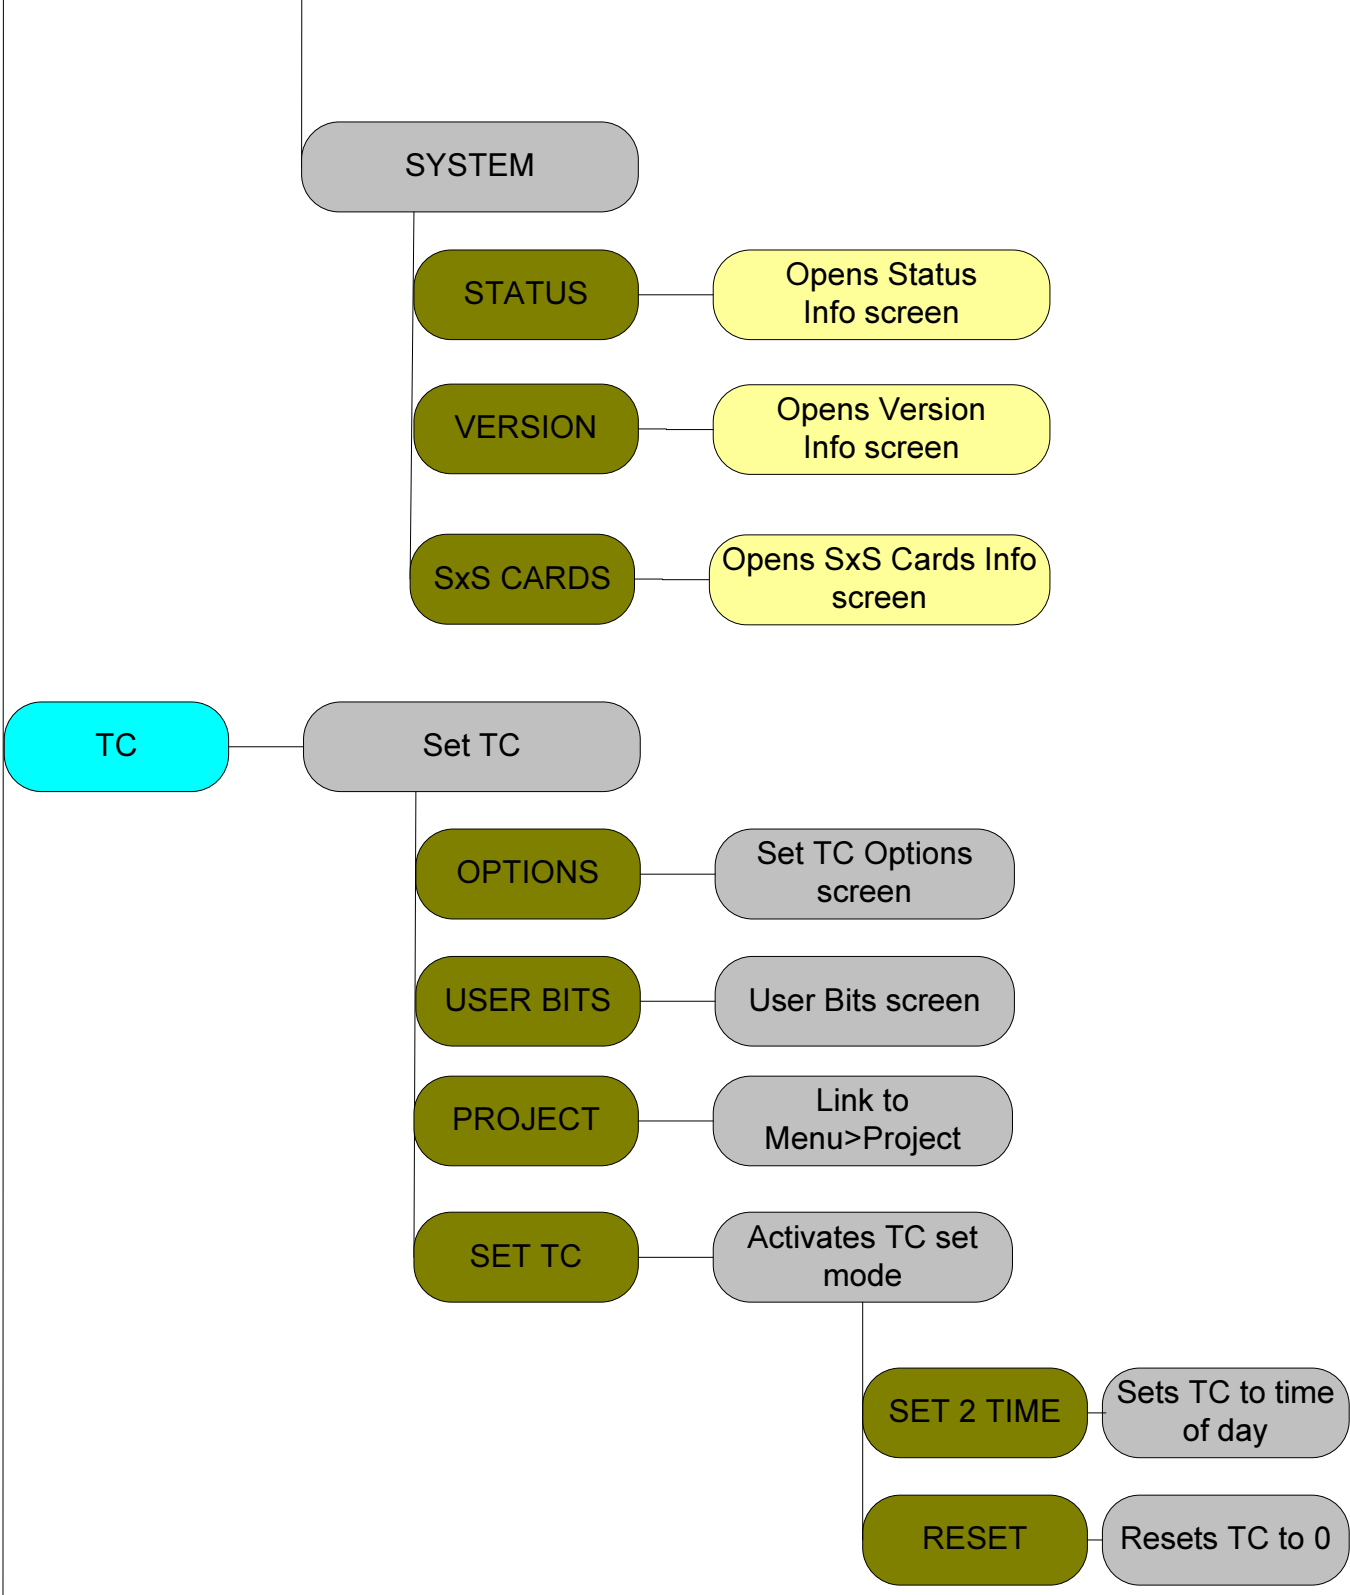

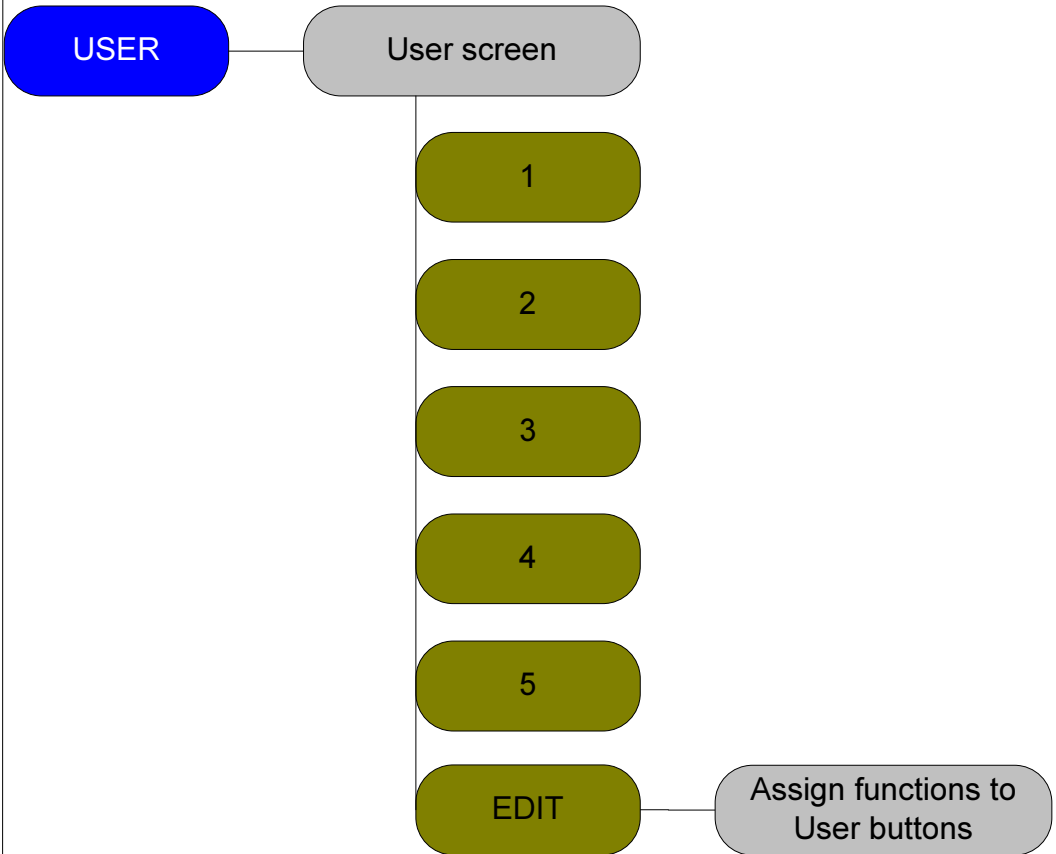

PLAY Loads list of all clips on SxS – no playback!

GRAB Not in use

LOCK Long press to lock/unlock

ON/OFF Long press for power off, short press for power on

HOME Back to HomeScreen

BACK Go to previous screen/Cancel

REC Starts/stops internal recording

* Default list values cannot be deleted

** When Sensor is linked to Rec out, list is not displayed!

LEGEND:

HARD BUTTON

SOFT BUTTON

Screen

Behaviour description

HARD BUTTON